




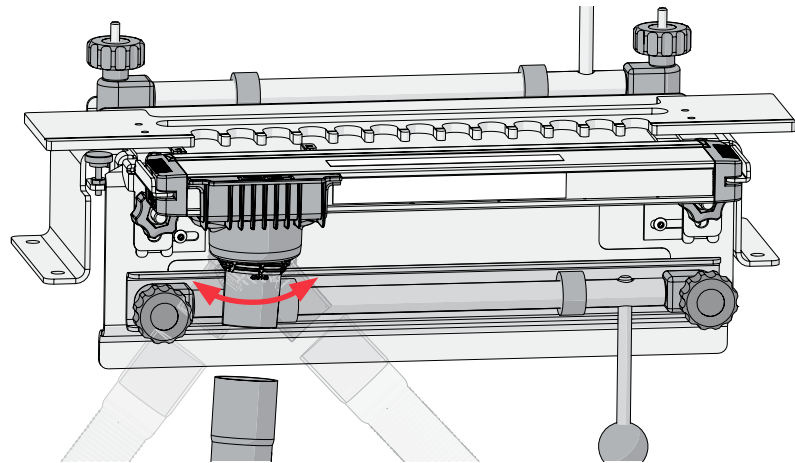


Step 12 The swivel action vacuum port accepts a 1½" (38mm) diameter hose. Attach your shop vacuum hose to the dust collection port on the vacuum box assembly.

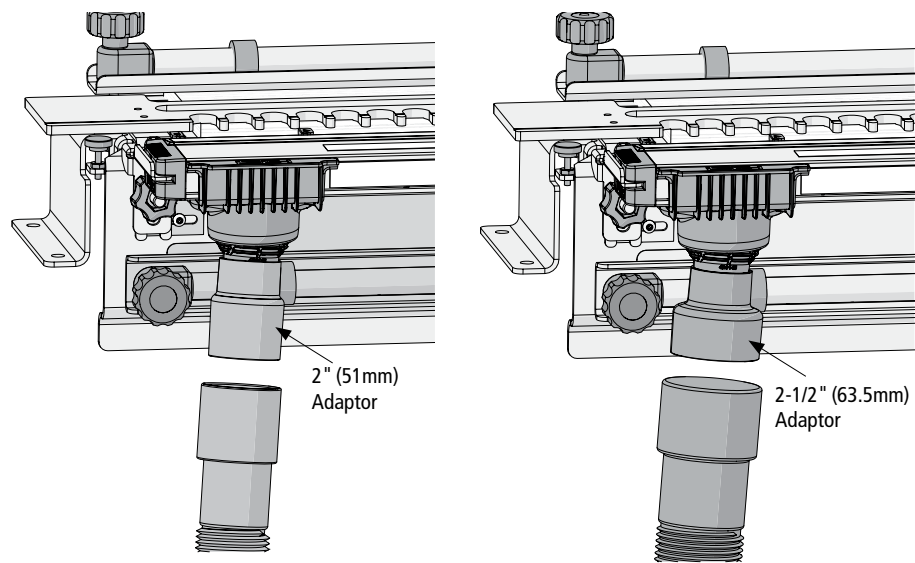


Step 13 Two hose adaptors, 2" (51mm) and 2 ½" (63.5mm), are included with the VRS1200.

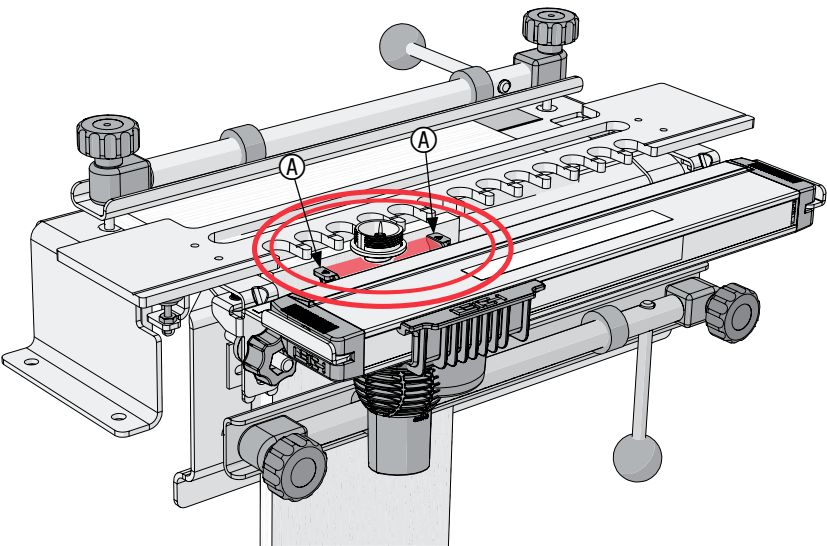

Step 14 When routing, the VRS1200 beam should be moved closer to the workpiece for maximum chip collection. The tabs (A) on either side of the vacuum box should be close to, but not touching the workpiece. The guide bushing mounted to the router base is positioned between the tabs of the dust collector.

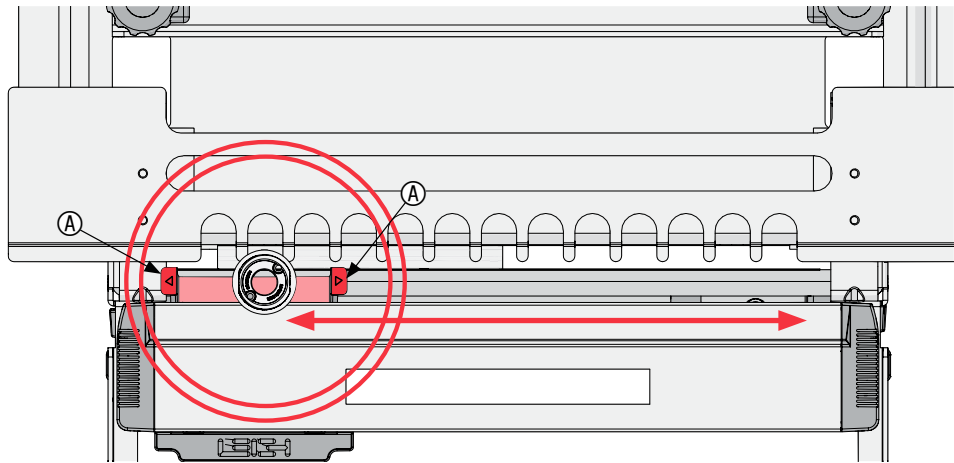

Step 15 As the router moves across the beam, in and around the fingers, the guide bushing attached to the router base contacts the vacuum box tabs (A) and moves it across the beam. The vacuum box is always positioned for maximum dust collection.

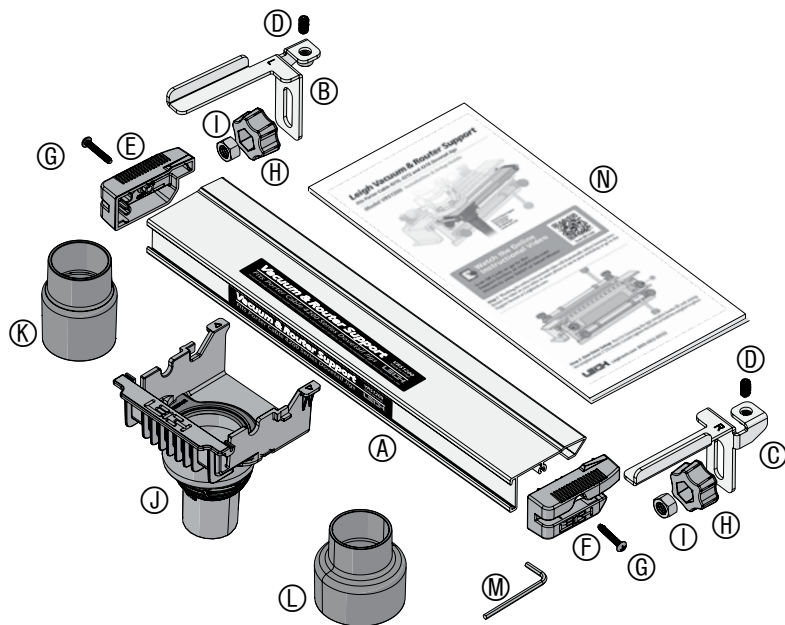

PART DESCRIPTION	PART NO.	QUANTITY
(A) VRS1200 Beam Extrusion with Decals	426105	1
(B) Left Support Bracket	426175	1
(C) Right Support Bracket	426180	1
(D) Support Bracket Set Screw 1/4" - 20 x 1/2"	426185	2
(E) Left End Cap with Spring	426220	1
(F) Right End Cap with Spring	426225	1
(G) End Housing Screw No.8 - 32 x 1"	426190	2
(H) Support Bracket Knob	426207	2
(I) Support Bracket Nut 3/8" - 16	426208	2
(J) Vacuum Box Assembly	426230	1
(K) 2" (51mm) Vacuum Box Hose Adaptor	426150	1
(L) 2-1/2" (63.5mm) Vacuum Box Hose Adaptor	426155	1
(M) Hex Key	426216	1
(N) Fully Illustrated Installation & Setup Guide	426240	1

Installation & Setup Video See Support section of LeighTools.com
Customer Support Call 1-800-267-8761 or email customerservice@leevalley.com
Find Retailers See Support section of LeighTools.com




© 2018 Leigh Industries Ltd. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of Leigh Industries Ltd. E&OE Errors and omissions excepted. Leigh Industries Ltd. is not an authorized dealer, distributor or service provider or otherwise affiliated or associated with Porter-Cable. 05/2020
Printed in China

Leigh Vacuum & Router Support

Fits Porter-Cable 4210, 4212 and 4216 Dovetail Jigs

Model VRS1200 Installation & Setup Guide

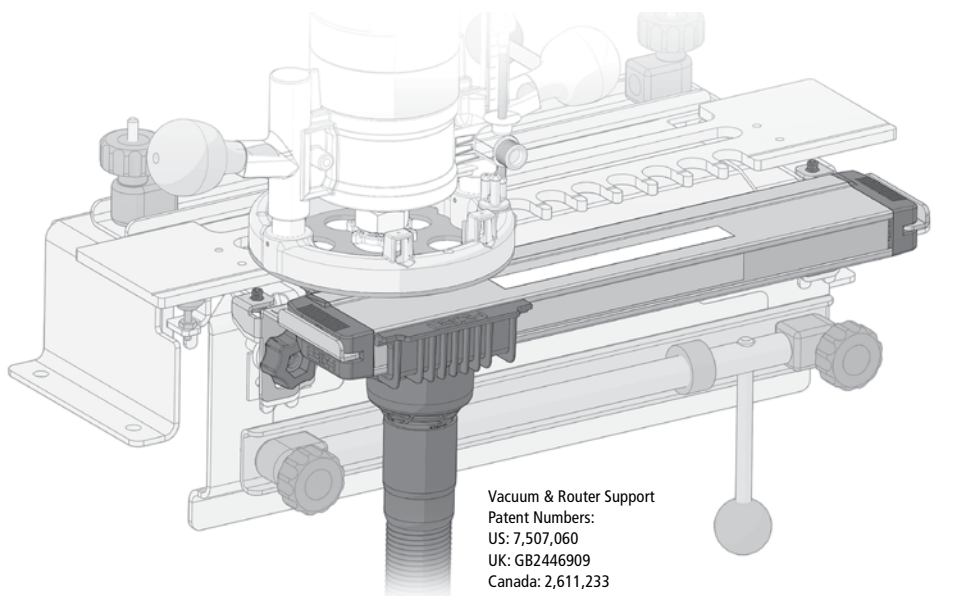


Watch the Online Instructional Video

Scan QR Code or go to the Support Section at LeighTools.com
Stream to your Tablet or Smart Phone


Scan QR Code

Step 1 Watching the online instructional video will dramatically reduce learning time. You can find the video in the Support Section at LeighTools.com. Stream the video to your tablet or smart phone for quick visual support in your workshop.

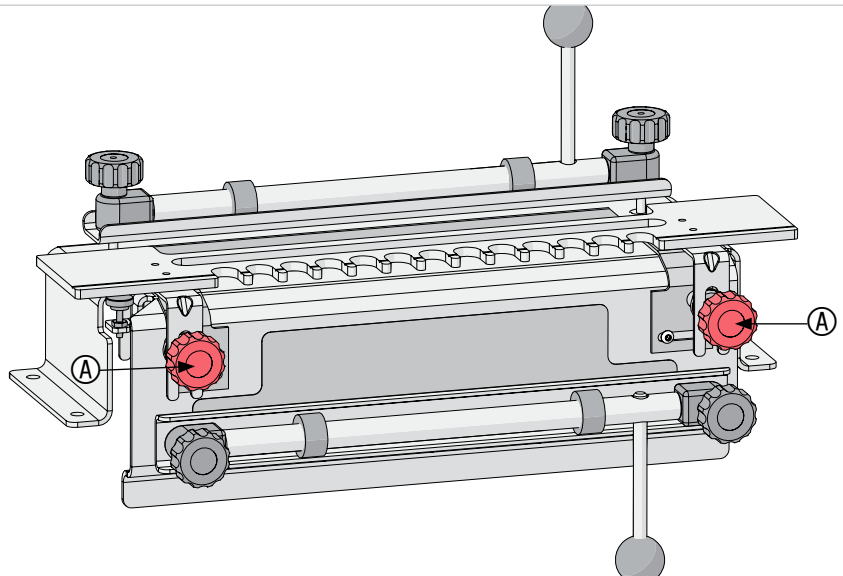


Step 2 One-time Setup Start by loosening the jig's template knobs (A) and raising the template about 1" (25.4mm). Loosely tighten the knobs to hold the template in place.




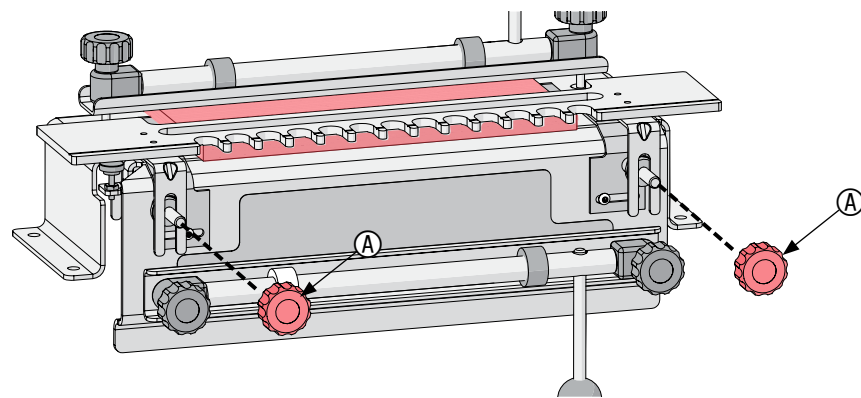


Step 3 Place a flat board approximately 10" x 6" x 3/4" (254mm x 152mm x 19mm) thick, under the rear clamp and template and secure in place with the rear clamp. The board will hold the template flat during installation and setup. **Remove** the Porter-Cable template knobs (A) and lower the template flat onto the board. Store the knobs in a safe place; they are not needed with the VRS1200.

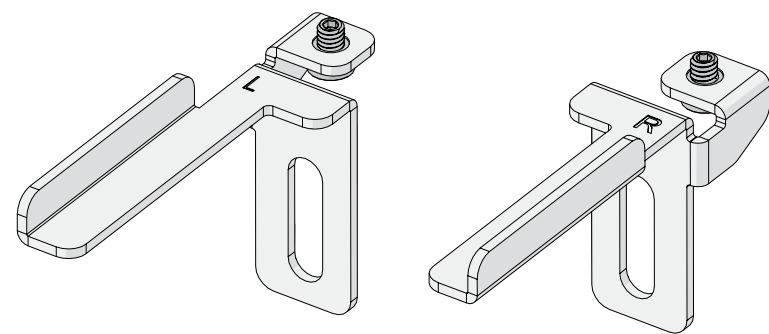



Step 4 The Leigh VRS1200 Support Brackets are marked with an L (left side) and an R (right side).

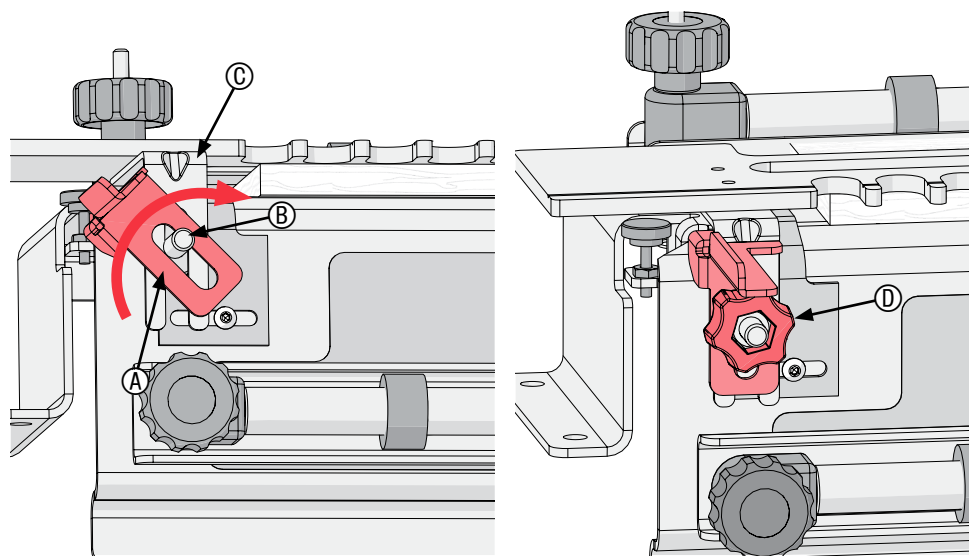


Step 5 Hold the VRS1200 left bracket (A) outwards at about a 45° angle and slide it over the template bolt (B) until it contacts the template bracket (C). Turn the left bracket clockwise until it's in the vertical position, and loosely thread on an included VRS1200 knob (D).

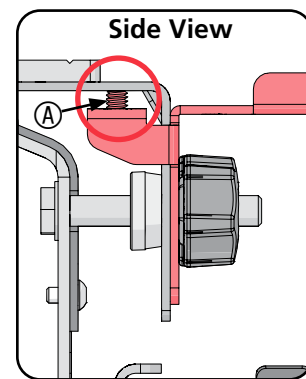


Step 6 Raise the support bracket until the height adjusting screw (A) touches the bottom of the template bracket. Tighten the template knob (B). Repeat Steps 5 and 6 at the right end of the jig.

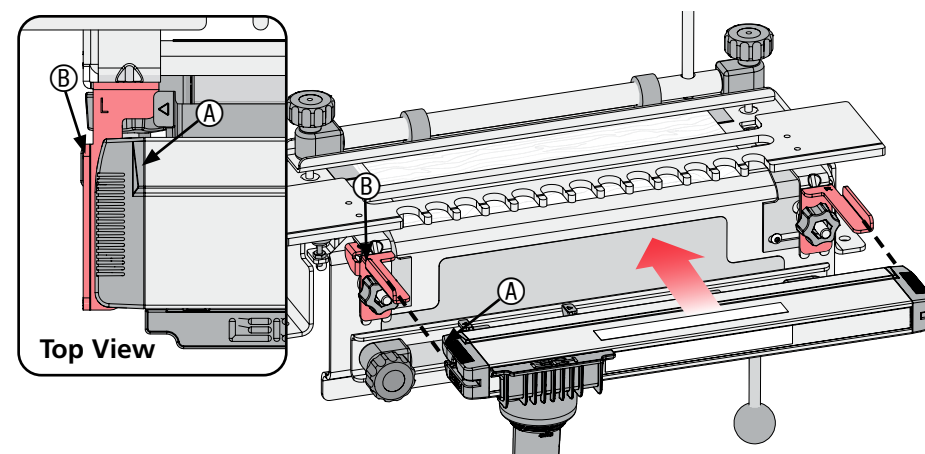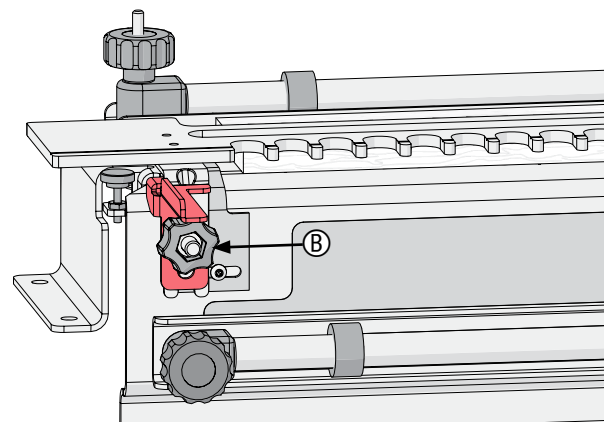


Step 7 Under light pressure, slide the VRS1200 beam onto the support brackets until the end cap of the beam (A) is even with the vertical portion of the bracket (B). The beam is held securely on the support brackets with an internal tension spring. This beam position is used for the rest of the setup.

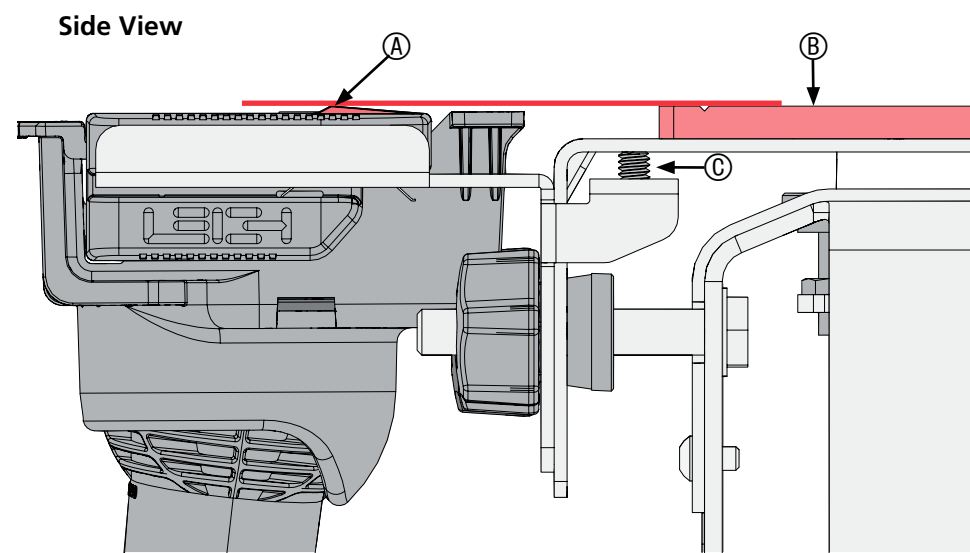


Step 8 The high point on the VRS1200 beam (A) must be level with the template (B). The support bracket set screws (C) are used to adjust the beam height.

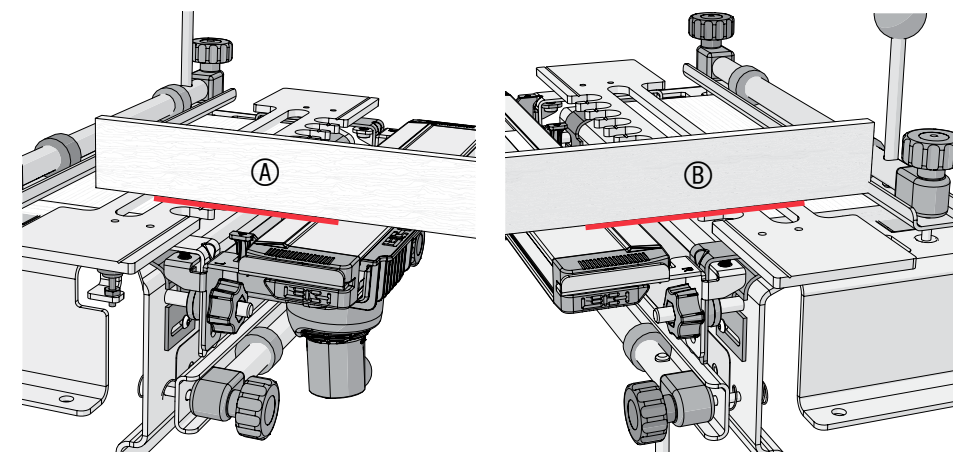

Step 9 The VRS1200 support brackets will be adjusted separately. Starting on the left-hand side of the jig, place a straight board (A), or other straight edge across the template and beam to determine whether the beam needs to be lowered or raised. Then check the right-hand side (B).

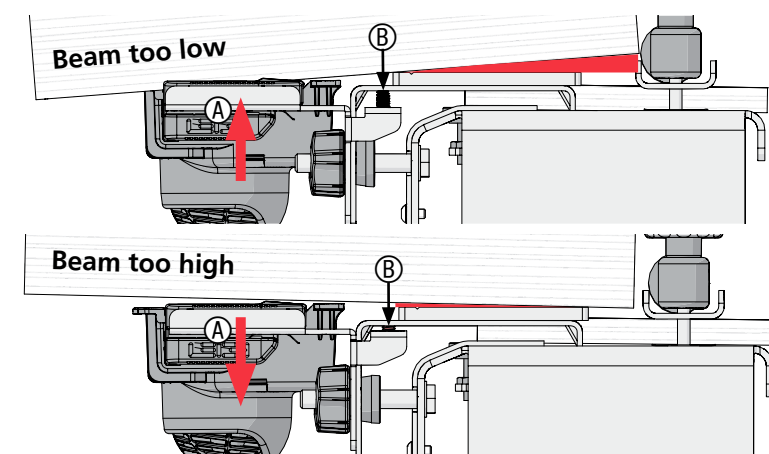

Step 10 If the VRS1200 beam is **lower than the template**, the straight edge will not sit flat, as shown in the top drawing (exaggerated for clarity), and the beam must be raised (A) using the set screw (B) on each VRS1200 support bracket. If the VRS1200 beam is **higher than the template**, as shown in the bottom drawing, the beam must be lowered (A) using the set screw (B) on each VRS1200 support bracket. **See next step for adjustment procedure.**

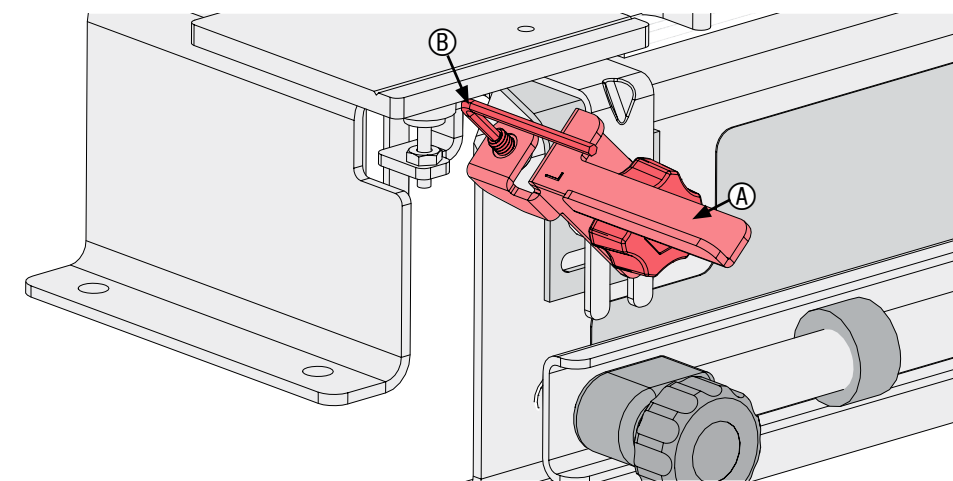

Step 11 To adjust the set screws, first remove the beam from the support brackets. Loosen the left knob slightly and turn the support bracket (A) outwards. Using the provided hex key (B), turn the set screw **clockwise to raise** the beam, and **counter clockwise to lower** the beam, as required. Next, adjust the right support bracket. Place the beam back on the support brackets and check the height with the straight edge (see Step 9). If necessary, repeat this one-time process until the template and the ridge on the beam are at the same height.

Leigh VRS Vacuum & Router Support

Customer Support

Our Commitment to You Leigh Industries takes pride in its commitment to providing excellence in customer service and support. This user guide is designed to provide you with the answers to any questions you have. However, if you require assistance, please feel free to contact our technical support staff or a distributor listed below.

Manufacturer: Canada/USA

TEL/FAX

**Customer Service
and Technical Support**

1-800-267-8761 (Canada)

1-800-267-8735 (USA)

EMAIL/WEB

Customer Service

customerservice@leevalley.com

NOTE: Email can be useful, but technical queries usually raise queries from us. A phone call is the quickest and most convenient way to get queries answered, either directly to Lee Valley (toll free in N. America) or to your national distributor. –Thanks!

MAILING ADDRESS

Lee Valley Tools Ltd.

P.O. Box 6295, Station J

Ottawa, ON

K2A 1T4

LOCATION

Lee Valley Tools Ltd.

1090 Morrison Dr,

Ottawa, ON

K2H 1C2

Distributors

AUSTRALIA & NEW ZEALAND

Carbatec - The Home of Woodworking

Unit 2, 364 New Cleveland Road

Tingalpa, QLD 4173 Australia

Tel: 07 3569 3205

Tel (Int.): +61 7 3292 0392

Email: Purchasing@carbatec.com.au

Web: carbatec.com.au

CHINA

Nanjing Haiwei Machinery Co., Ltd.

Harvey Woodworking Technology(Nanjing) Co., Ltd.

68-10 Suyuan Avenue, Jiangning District,

Nanjing, 211100 China

Tel: 86-(0)25-8666-8172 / 5792 8021

Fax: 86-(0)25-5792-8826

Email: cassie@harvey.cn

Web: www.harveymachinery.com

Web: www.harveyworks.cn

FRANCE

Ets Bordet

98 Rue Louis Ampère,

Neuilly Sur Marne, 93330 France

Tel: 01 41 53 40 40

Email: info@bordet.fr

Web: www.bordet.fr

GERMANY

Hacker GmbH

Holzbearbeitungsmaschinen

Traberhofstraße 103 D-83026 Rosenheim,

Deutschland

Tel: 08031/68171

Fax: 08031 68221

Email: hacker.rosenheim@t-online.de

Web: www.hacker-rosenheim.de

ITALY

Ferrari Macchine Legno SRL

Via Gallarate 76 Settimo,

20019 Settimo M.se (MI) Italy

Tel: 39 02 335 010 95

Fax: 39 02 335 005 27

Email: info@ferrarimacchine.com

Web: www.ferrarimacchine.com

JAPAN

Off Corporation Inc.

785-1 Hirose, Shimizu-ku, Shizuoka-shi

Shizuoka Ken, 424-0102 Japan

Tel: 81-50-3816-0115

Fax: 81-54-367-6515

Email: info@off.co.jp

Web: www.off.co.jp/category/LEIGH/

KOREA

Leigh Korea

604, 13-1, Gugal-Ro 72beon-gil,

Giheung[1]Youngin-si,

Gyeonggi Republic of Korea ,

16972 South-Korea

Tel: +82-(0)31-281-1141

Fax: +82-0504-192-0629

Email: maengha@leighkorea.com

Web: www.leighkorea.com

SOUTH AFRICA

Hardware Centre, Handico PTY Ltd/A Hardware
Centre

Shop 8 Homeworld Centre

CNR. Malibongwe & Rocky ST.

Randburg, Ferndale

South Africa

Tel: +27 011 791-0844/46

Fax: +27 011 791-0850

Email: info@hardwarecentre.co.za

Web: www.hardwarecentre.co.za

SWEDEN

Toolbox Sweden AB

Facetten Kaj 9

Atvidaberg, 59730

Sweden

Tel: 46 120 854 50

Fax: 46 120 854 69

Email: info@toolbox.se

Web: www.toolbox.se

UNITED KINGDOM & IRELAND

Axminster Tools & Machinery

Headquarters, Unit 10. Weycroft Ave.

Millwey Rise Industrial Estate

Axminster, EX13 5PH, United Kingdom

Tel: 011 44-927-630-007

Tel: 01297 630813

Fax: 011 44-870 432-7622

Fax: 01-297-631-224

Email: procurement@axminstertools.com

Web: www.axminster.co.uk/leigh

USA

Rockler

Woodcraft

Infinity Cutting Tools

Highland Hardware