


## TD330 User Guide

# CHAPTER 7 Guide Bushing Adaptor Selection

**FOR HANDHELD ROUTERS ONLY**

The TD330 requires a router fitted with the e10 guide bushing, and possibly an adaptor to fit the bushing to the router. Leigh offers a variety of adaptors, as shown below. They fit most common routers.

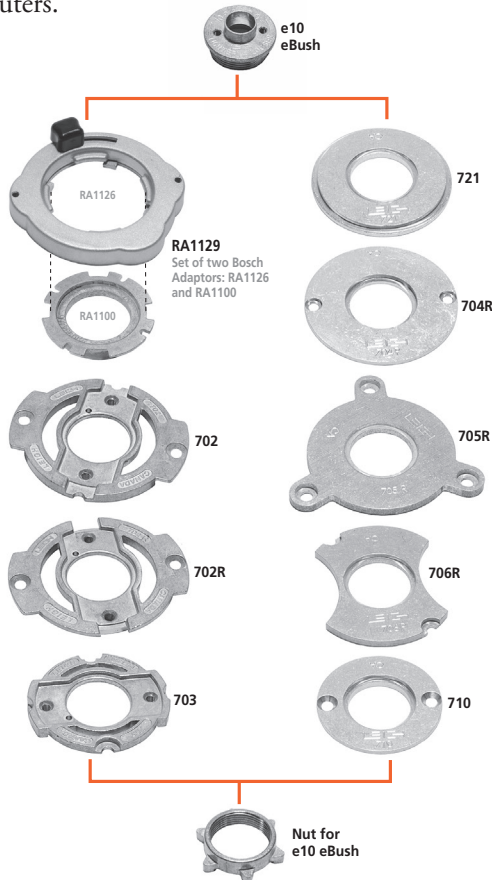

See the list of routers in the chart on the next page. **For a complete list of routers see [www.leightools.com](http://www.leightools.com).**



**Watch the Online  
Instructional  
Video**



Scan QR Code

**Reduce your learning time dramatically!** Stream to your smart phone or tablet to use in your workshop while you're working. See Instructional Videos section in Support menu at [leightools.com](http://leightools.com) or scan QR code for instant video.

**DIRECTIONS**

- A.** Locate router maker and router model in Columns 1 and 2.  
**B.** Locate adaptor required for your router in Column 3.
- Order Leigh adaptors (part no's in red) in Column 3 from Leigh.
  - Order Bosch adaptors RA1100 and RA1126 in Column 3 from Leigh or your Bosch dealer.
  - Order all other adaptors from the router manufacturer's dealer.

**Note:** Adaptor mounting screws are included with router.

**C. Note:** ♦ The e10 elliptical guide bushing (5/8" [15.8mm]) shown in column 4 is supplied with the TD330 jig. Order only if you require a replacement.

**Adaptors for Router Tables**

Leigh guide bushings and eBushes are based on the industry standard 1-3/8" 2-piece design. Most router tables have adaptors that accept these standard guide bushings. If your router table does not have a suitable adaptor, please check with the router table manufacturer.

1 BRAND	2 ROUTER MODEL	3 ROUTER ADAPTOR	4 e10 ♦
BLACK & DECKER	All Professional, HD1250, RP400K, 7614	Not Required	e10
	6200	720673-00	e10
	SR100, 7AAE, KW780 series, KW800, KW850	710	e10
BOSCH	90085, 90088, 90098, 90140, 90150, 90300, 90303, 90305, 91264	Aftermarket base plate required	e10
	1600, 1601, 1602, 1603, 1604, 1606, B1350	RA1110 required	e10
	North American ROUTERS PRODUCED AFTER mid-2010: 1613EVS, 1613AEVS, 1617, 1617EVS, 1618, 1618EVS, 1619EVS, MR23EVS, MRC23EVS, MRF23EVS, MRP23EVS	RA1100 & RA1126 req'd. Sold only as Set RA1129. Includes both.	e10
	North American ROUTERS PRODUCED BEFORE mid-2010 and others available worldwide that include the RA1126 adaptor: 1613(EVS)(AEVS), 1614(EVS), 1617EVS, 1618EVS, 1619EVS, B1450, GOF900(CE)(ACE), GOF1200, GOF1250(CE)(LCE), GOF1300(CE)(ACE), GOF1600CE, GOF2000CE, GMF1400, GMF1600CE, POF800ACE, POF1100AE, POF1200AE, POF1400ACE	RA1100 required Sold only as Set RA1129 (Set includes RA1100 and RA1126)	e10
	1611, 1611EVS, 1615, 1615EVS, B1550, GOF1600, GOF1700ACE	702	e10
CRAFTSMAN (SEARS)	All non-plunge models	Aftermarket base plate required	e10
	135275070 Plunge	See Skill 1823 or 1835	e10
	Other plunge models	702	e10
	MD11 Plunge & Fixed Base. MD9.5 Fixed Base	Not Required	e10
DEWALT	DW610, DW616, DW618	Not Required	e10
	DW613, DW615(UK)	710	e10
	DW614, DW615, DW621, DW624, DW625, DW626	N. America Only, Supplied w/router	e10
	DW621K, DW622 and DW626 outside N. America	706R	e10
	DW625 Type 1,2,3,5 outside N. America	702	e10
	DW624 & DW625 Type 4 outside N. America, DW625EK	702R	e10
FEIN	RT1800	Supplied w/router	e10
FESTOOL	OF1E, OF2E, OF650, OF900E, OF1000, OF1010E	704R	e10
	OF2000, OF2000E	705R	e10
	OF1400 and OF2200 North America Only	Supplied w/router	e10
	OF1400 Outside North America	493566	e10
	OF2200 Outside North America	494627 O-ring may be required to keep bushing centered	e10
FREUD	FT1700(2), FT2000, FT2200, FT3000	721	e10
HITACHI	TR8, TR12, FM8, M8, M12 Series	325211 OR 703	e10
	M12VC, KM12SC, KM12VC	Not Required	e10
	M12SA2, M12V2	325224	e10
MAKITA	M363, MRP090, RP1800(F), RP1801(F), RP2300(FC), RP2301(FC), 3612C Europe Qk Fit Base	721	e10
	3600, 3606, 3608, 3612, 3612B, 3612BR, 3612C N. America, 3620, 3621, RP0900, RP900K	703	e10
	3601B	321 493-1	e10
	RP0910, RP1110C	706R	e10
	RF1100, RF1101, RD1100, RD1101, RP1101	Not Required	e10
MASTERCRAFT	Please contact Leigh for assistance		
MILWAUKEE	5615, 5616, 5619	49-54-1040 (replacement base)	e10
	5625	49-54-1026 (replacement base)	e10
	5670	Not Required	e10
PORTER CABLE (ROCKWELL)	All	Not Required or Supplied w/router	e10
RIDGID	R2930 (for all others, please contact Leigh for assistance)	704R	e10
RYOBI	R30, R50, R150, R151, RE155, R500, R501, R502	703	e10
	R600, R601, RE600, RE601	702	e10
	R160, R161, R162, R163K, R165, R170, R175, RE175, R180, R180PL, R181, R185, ERT1150	706R	e10
	1823 or 1835	91803	e10
SKIL	SK1810, 1815, 1820, 1825	RAS140	e10
	All others	Aftermarket base plate required	e10
	T3, T4, T5, T9, T10, T11—UniBase required	710	e10
TREND	TRC001	TGA006 or 704R	e10
	JOF001, MOF001, TRA001	Accessory Kit (includes adaptor) TGA001 or TGA250	e10