
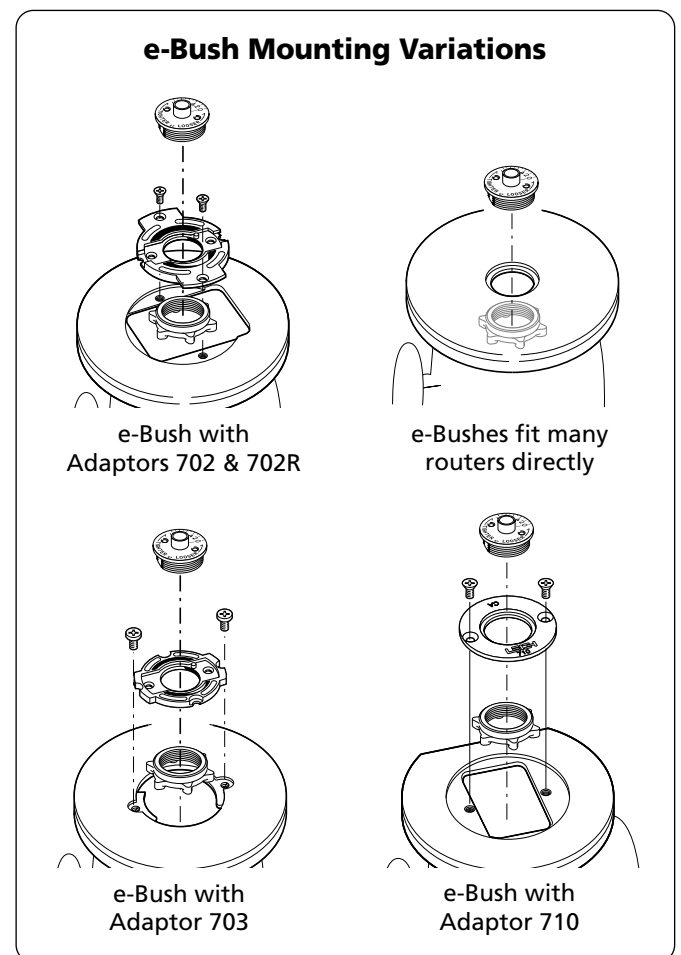


Appendix I

Attaching the Leigh e-Bush to the Router

e-Bush and Guide Adaptors

The Leigh e-Bush fits directly to most popular router models such as Porter Cable, Black & Decker, and Dewalt. Many other makes, e.g. Bosch, Fein, Festool, Milwaukee etc., either offer or come complete with base adaptors that accept the e-Bush. In addition Leigh offers the nine adaptors below to allow the use of over one hundred other router models new and old. See list of routers on next page.

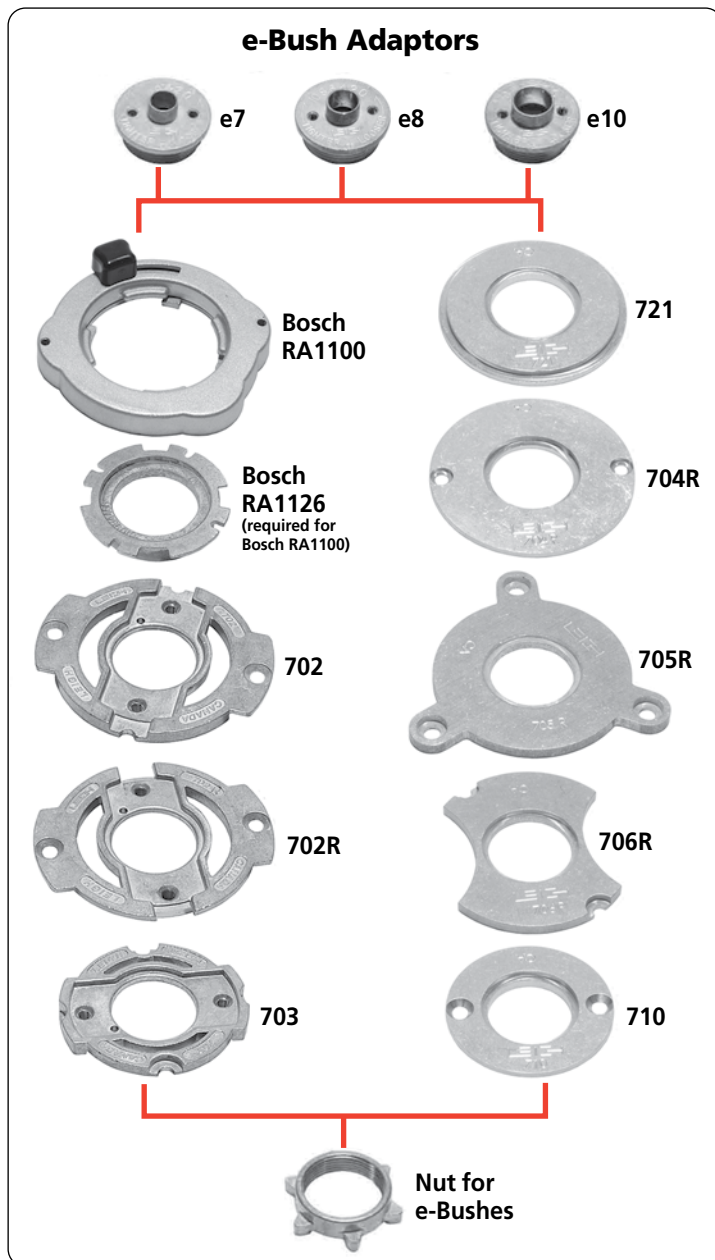

eBush Adaptor Selection Leigh dovetail jigs require a router fitted with a guide bushing. An adaptor may be required to fit the bushing to the router. *See www.Leightools.com for the complete list of routers.*

DIRECTIONS

- A.** Locate name of router maker in Column 1.
 - B.** Locate router model in Column 2. If your router is not listed visit Leightools.com for a complete, up-to-date list of routers.
 - C.** Locate adaptor required for your router in Column 3.
 - Order Leigh adaptors (**part no's in red**) in Column 3 from Leigh.
 - Order Bosch adaptors RA1100 and RA1126 in Column 3 from Leigh or your Bosch dealer.
 - Order all other adaptors in Column 3 from the router manufacturer's dealer.
- Note:** Adaptor mounting screws are included with router.

■ MAFELL – Rework adaptor slightly.

- D.** Guide bushings in Columns 4, 5 and 6 fit all adaptors listed. Note the following:
 - ◆ A 7/16" e7 guide bushing is used only on the F3/M Template.
 - A 1/2" e8 guide bushing is used on F3, F18 and F24 Finger Joint Templates.
 - ▲ A 5/8" e10 guide bushing is used on F3, F18 and F24 Finger Joint Templates. Use only with 1/2" shank router bits on D4R Pro, D4R, D4, D3 and D1258(R) jigs, and 18" and 24" Super Jigs.

1 ROUTER MAKER	2 ROUTER MODEL	3 ROUTER ADAPTOR	4 7/16" OD BUSHING ◆	5 1/2" OD BUSHING ▲	6 5/8" OD BUSHING ▲
AEG	OFE 710 in plunge base	Not Required	e7	e8	e10
	OFSE 2000	703	e7	e8	e10
	RT1350E	706R	e7	e8	e10
BLACK & DECKER	All Professional, HD1250, RP400K, 7614	Not Required	e7	e8	e10
	6200	720673-00	e7	e8	e10
	SR100, 7AEE, KW780 series, KW800, KW850	710	e7	e8	e10
	90085, 90088, 90098, 90140, 90150, 90300, 90303, 90305, 91264	Aftermarket base plate required	e7	e8	e10
	1600, 1601, 1602, 1603, 1604, 1606, B1350	RA1110	e7	e8	e10
	North American ROUTERS PRODUCED AFTER mid-2010: 1613EVS, 1613AEVS, 1617, 1617EVS, 1618, 1618EVS, 1619EVS, MR23EVS, MRC23EVS, MRF23EVS, MRP23EVS	RA1126 quick change adaptor and RA1100 bushing adaptor req'd	e7	e8	e10
BOSCH	North American ROUTERS PRODUCED BEFORE mid-2010 and others available worldwide that include the RA1126 adaptor: 1613(EVS) (AEVS), 1614(EVS), 1617EVS, 1618EVS, 1619EVS, B1450, GOF900(CE) (ACE), GOF1200, GOF1250(CE)(LCE), GOF1300(CE)(ACE), GOF1600CE, GOF2000CE, GMF1400, GMF1600CE, POF800ACE, POF1100AE, POF1200AE, POF1400ACE	RA1100	e7	e8	e10
	1611, 1611EVS, 1615, 1615EVS, B1550, GOF1600, GOF1700ACE	702	e7	e8	e10
	All non-plunge models	Aftermarket base plate required	e7	e8	e10
CRAFTSMAN (SEARS)	135275070 Plunge	See Skill 1823 or 1835			
	Other plunge models	702	e7	e8	e10
	MD11 Plunge & Fixed Base, MD9.5 Fixed Base	Not Required	e7	e8	e10
DEWALT	DW610, DW616, DW618	Not Required	e7	e8	e10
	DW613, DW615(JK)	710	e7	e8	e10
	DW614, DW615, DW621, DW624, DW625, DW626	N. America Only, Supplied w/router	e7	e8	e10
	DW621K, DW622 and DW626 outside N. America	706R	e7	e8	e10
	DW625 Type 1,2,3,5 outside N. America	702	e7	e8	e10
	DW624 & DW625 Type 4 outside N.America, DW625EK	702R	e7	e8	e10
ELU	OF15, OF15E, OF97, OF97E	706R	e7	e8	e10
	MOF68, MOF69, MOF96, MOF96E	710	e7	e8	e10
	MOF131, MOF177 Type 1,2, & 3	702	e7	e8	e10
	MOF177 Type 4, MOF177EK	702R	e7	e8	e10
	2720, 2721, 3328	Not Required	e7	e8	e10
	3303, 3304	E09600 or 761 270-00	e7	e8	e10
FEIN	3337, 3338, 3339	702	e7	e8	e10
	RT1800	Supplied w/router	e7	e8	e10
	OF1E, OF2E, OF650, OF900E, OF1000, OF1010E	704R	e7	e8	e10
FESTOOL	OF2000, OF2000E	705R	e7	e8	e10
	OF1400 and OF2200 North America Only	Supplied w/router	e7	e8	e10
	OF1400 Outside North America	493566	e7	e8	e10
	OF2200 Outside North America	494627 O-Ring may be required to keep bushing centered	e7	e8	e10
FREUD	FT1700(2), FT2000, FT2200, FT3000	721	e7	e8	e10
HITACHI	TR8, TR12, FM8, M8, M12 Series	325211 OR 703	e7	e8	e10
	M12VC, KM12SC, KM12VC	Not Required	e7	e8	e10
	M12SA2, M12V2	325224	e7	e8	e10
MAFELL	L065E	702 ■	e7	e8	e10
MAKITA	M363, MRP090, RP1800(F), RP1801(F), RP2300(FC), RP2301(FC), 3612C Europe Qk Fit Base	721	e7	e8	e10
	3600, 3606, 3608, 3612, 3612B, 3612BR, 3612C N. America, 3620, 3621, RP0900, RP900K	703	e7	e8	e10
	3601B	321 493-1	e7	e8	e10
	RP0910, RP1110C	706R	e7	e8	e10
	RF1100, RF1101, RD1100, RD1101, RP1101	Not Required	e7	e8	e10
MASTERCRAFT	Please contact Leigh for assistance				
METABO	OF1612, OFE1812 (for all others, please contact Leigh for assistance)	704R	e7	e8	e10
MILWAUKEE	5615, 5616, 5619	49-54-1040 (replacement base)	e7	e8	e10
	5625	49-54-1026 (replacement base)	e7	e8	e10
	5670	Not Required	e7	e8	e10
PERLES	OF808 Series, OFE6990	710	e7	e8	e10
PORTER CABLE (ROCKWELL)	All	Not Required or Supplied w/router	e7	e8	e10
RIDGID	R2930 (for all others, please contact Leigh for assistance)	704R	e7	e8	e10
RYOBI	R30, R50, R150, R151, RE155, R500, R501, R502	703	e7	e8	e10
	R600, R601, RE600, RE601	702	e7	e8	e10
	R160, R161, R162, R163K, R165, R170, R175, RE175, R180, R180PL, R181, R185, ERT1150	706R	e7	e8	e10
	1823 or 1835	91803	e7	e8	e10
SKIL	SK1810, 1815, 1820, 1825	RAS140	e7	e8	e10
	All others	Aftermarket base plate required	e7	e8	e10
	T3, T4, T5, T9, T10, T11 – UniBase required	710	e7	e8	e10
TREND	TRC001	TGA006 or 704R	e7	e8	e10
TRITON	JOF001, MOF001, TRA001	Accessory Kit (includes adaptor) TGA001 or TGA250	e7	e8	e10
WEGOMA	OF850 Series	710	e7	e8	e10